


	Insulation Voltage	Gripping capacity	Max Current	Cable Section	Weight (kg)		
	3000 V	0.5 mm ÷ 3 mm	10 A	6 - 10 - 16 mm²	1		
_							
To read the installation and maintenance instructions is reccommended.							
	The temperture class T6/T85°C takes into account an extended Ambient Temperature (A.T.) from -50°C to +60°C						

www.coelbo.it

whereas the temperture class T5/T100°C of an extended A.T. from -50°C to +80°C.

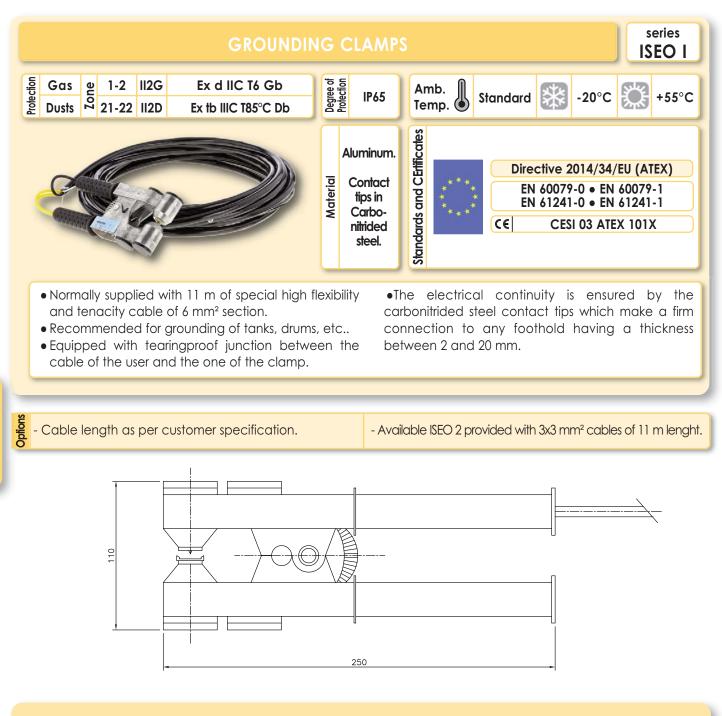


3000 V 2 mm ÷ 20 mm 10 A 4.0 ÷ 6.0 mm² 0.7	Insulation Voltage	Gripping capacity	Max Current	Cable Section	Weight (kg)
	3000 V	2 mm ÷ 20 mm	10 A	4.0 ÷ 6.0 mm <sup>2</sup>	0.7

Check daily the sliding of the crimping rod within the body of the clamp. Keep the coupling clean and lubricated with silicone spray. This is necessary to ensure grounding while making sure that any disruptive discharges occur in the inner chamber, purposely isolated, and not in the external environment.

For correct operation of the clamp it is recommended a monthly check of the crimping plugs, subject to wear; this ensures a perfect contact with the terminal which are linked to.

Check the integrity of the electrical cable to the ground terminal in the vicinity of the clamp itself; verify the electrical continuity (at least once a month).

For use in potentially explosive atmospheres caused by dusts the user must provide a regular cleaning to limit the formation of layers of dust.

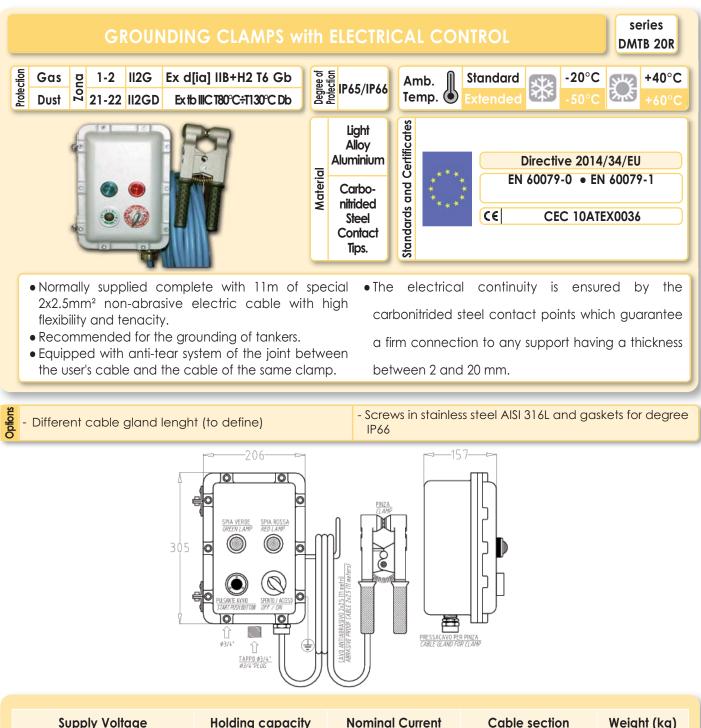

			Cable section	Weight (kg)
230 V - 50/60Hz 2	mm ÷ 20 mm	28 mA	2x2,5 mm <sup>2</sup>	14

Check the sliding of the crimping rod daily in the clamp, keeping the coupling clean and lubricated with silicone spray. This operation is necessary to ensure grounding and to guarantee that any destructive discharges occur in the internal chamber, specifically isolated and not in the external environment.

For a good operation of the clamp we recommend a monthly check of the crimping pins subject to worn, which ensures perfect link with the terminal to which they are attached.

Check the integrity of the electric cable both at the ground terminal and near the clamp; check the electrical continuity (at least once a month).

For use in a potentially explosive atmosphere caused by combustible dusts, the user must ensure regular cleaning to limit the formation of dust layers.

